



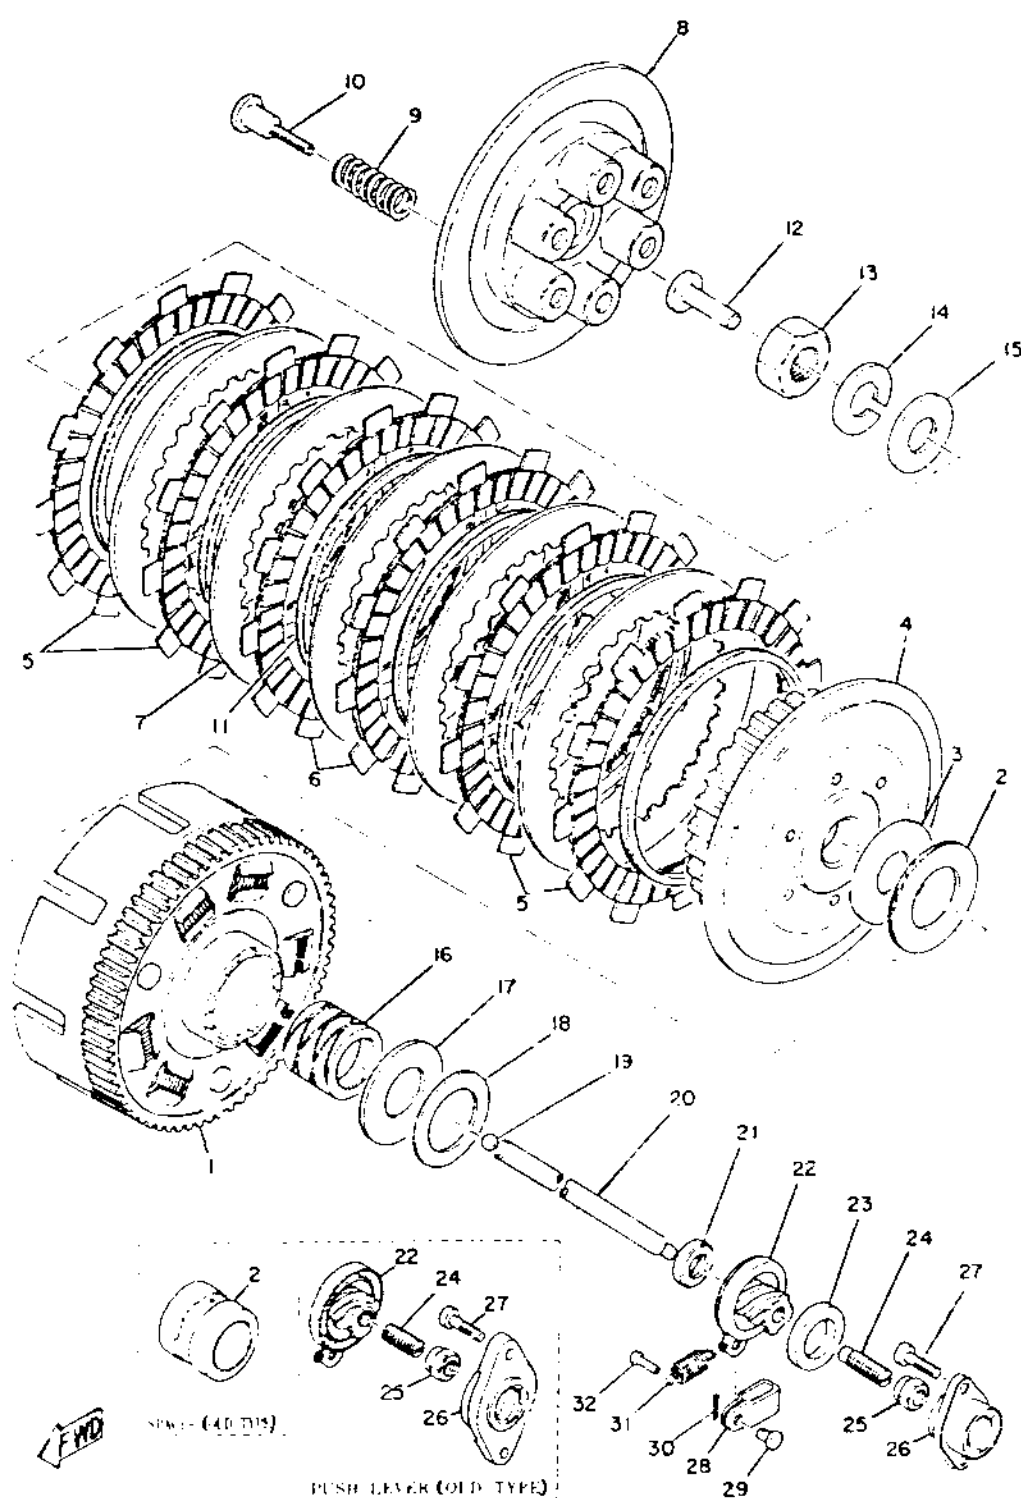

Ref. No	Part Number	Description	XS 1	XS 18	XS 2	TX 650
0-1	256-16301-60-00	CLUTCH ASS'Y.....	1	1	1	1
1	256-16150-02-00	DRIVEN GEAR COMP. (72T) (256-16150-01)	1	1	1	1
2	93341-23504-00	BEARING	1	1	1	1
3	170-16164-00-00	PLATE, thrust 2 (25-50-2) ...		1	1	1
4	256-16371-09-00	BOSS, clutch.	1	1	1	1
5	256-16331-00-00	PLATE, friction 2.....	4	4	4	4
6	341-16321-03-00	PLATE, friction 1	2	2	2	2
7	256-16325-00-00	PLATE, clutch	5	5	5	5
8	256-16351-00-00	PLATE, pressure	1	1	1	1
9	9050-26148-00	SPRING, clutch (256-16333-00)	6			
	9050-23142-00	SPRING, clutch (256-16333-10)	6	6	6	6
10	90149-06102-00	SCREW, spring (256-16337-00)	6	6	6	6
11	256-16357-00-00	RING, cushion.....		6	6	6
12	256-16356-00-00	ROD, push 1.....	1	1	1	1
13	90170-18089-00	NUT, lock (156-16174-00)...	1	1	1	1
14	92901-18100-00	WASHER, spring (92909-18100).....	1	1	1	1
15	92900-18200-00	WASHER, plain	1	1	1	1
16	90560-25131-00	SPACER (256-16181-00) ...	1	1	1	1
17	170-16164-00-00	PLATE, thrust 2 (25-50-2)...	1	1	1	1
18	90201-25290-00	WASHER (25.2-36-1.0) (131-15653-00)	1	1	1	1
19	93505-16006-00	BALL (5/16 inch)	1	1	1	1
20	256-16357-00-00	ROD, push	1	1	1	1
21	93102-08118-00	OIL SEAL (SD-8-25-6)	1	1	1	1
	93102-08206-00	OIL SEAL (93102-08118)...	1	1	1	1
22	256-16340-09-00	PUSH LEVER ASS'Y.....	1			
	447-16340-00-00	PUSH LEVER ASS'Y.....	1	1	1	1
23	214-16347-01-00	SEAL, dust	1	1	1	1
24	90113-08017-00	SCREW, adjusting (214-16343-00)	1			
	90113-08021-00	SCREW, adjusting (256-16343-01)	1	1	1	1

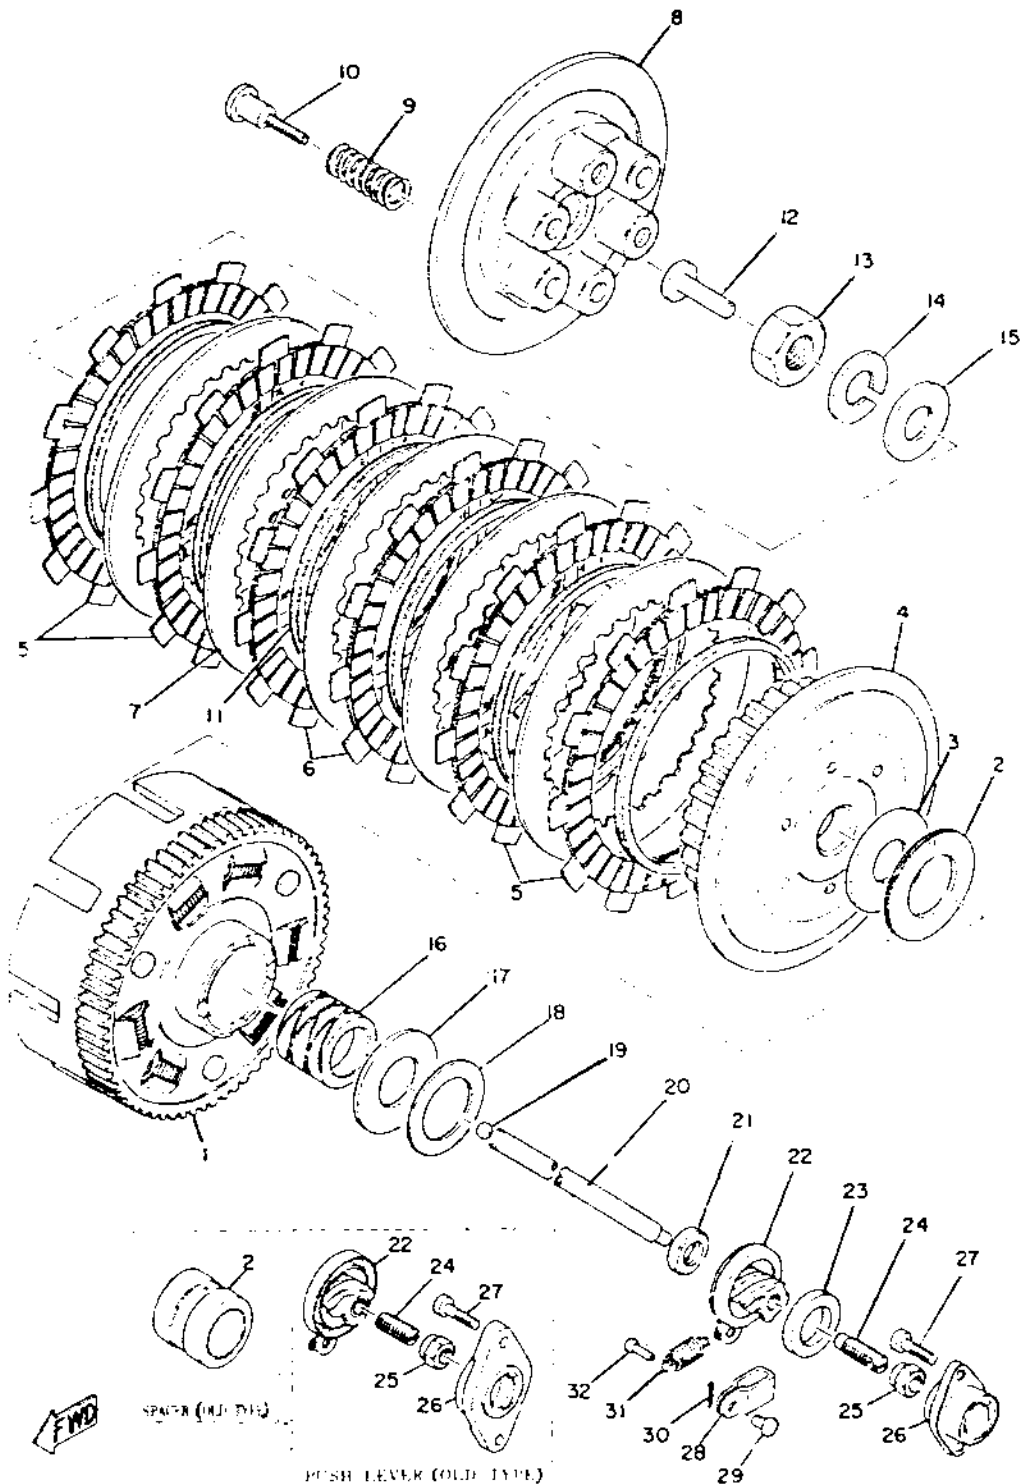

Ref. No.	Part Number	Description	XS 1	XS 1B	XS 2
25	90179-08179-00	NUT, adjusting (214-16344-00)	1	1	1
26	256-16396-00-00	HOUSING, push screw	1		
	256-16396-01-00	HOUSING, push screw	1	1	1
27	92503-06018-00	SCREW, pan head	2		
	98503-05012-00	SCREW, pan head	2	2	2
28	214-16389-00-00	JOINT	1	1	1
29	90240-06005-00	PIN (214-16379-00)	1	1	1
30	91401-10010-00	PIN, co.	1	1	1
31	90506-10020-00	SPRING, return (137-16345-00)	1		
	90506-10023-00	SPRING, return (168-16345-00)	1	1	1
22	132-16346-00-00	HOOK, spring	1	1	1