


Ref. No.	Part Number	Description	A	B	C
1	584-27111-00-00	STAND, main .....			1
2	90109-10268-00	BOLT .....			2
3	90185-10035-00	NUT, self-locking .....			2
4	90506-50064-00	SPRING .....			1
5	584-27311-00-00	STAND, side .....			1
6	90109-08185-00	BOLT .....			1
7	95301-08900-00	NUT, slotted .....			1
8	91401-20020-00	PIN, cotter .....			1
9	90507-29009-00	SPRING, tension .....			1
10	1T3-27410-00-33	FOOTREST ASS'Y, left .....			1
11	1T3-27420-00-33	FOOTREST ASS'Y, right .....			1

# XS650C

12	341-27451-00-00	FOOTREST 3 .....			2
13	341-27423-00-00	COVER, footrest left .....			1
14	341-27413-00-00	COVER, footrest right .....			1
15	90508-20023-00	SPRING .....			2
16	90243-08006-00	PIN .....			2
17	90201-06042-00	WASHER, plate .....			2
18	256-27414-00-00	DAMPER, rubber1 .....			4
19	90201-10437-00	WASHER, plate .....			4
20	92903-10100-00	WASHER, spring .....			4
21	90176-10013-00	NUT, cap .....			4
22	584-27432-00-00	BRACKET, rear footrest left .....			1
23	584-27442-00-00	BRACKET, rear footrest right .....			1

# SEAT - FOOTREST - BRAKE PEDAL XS650

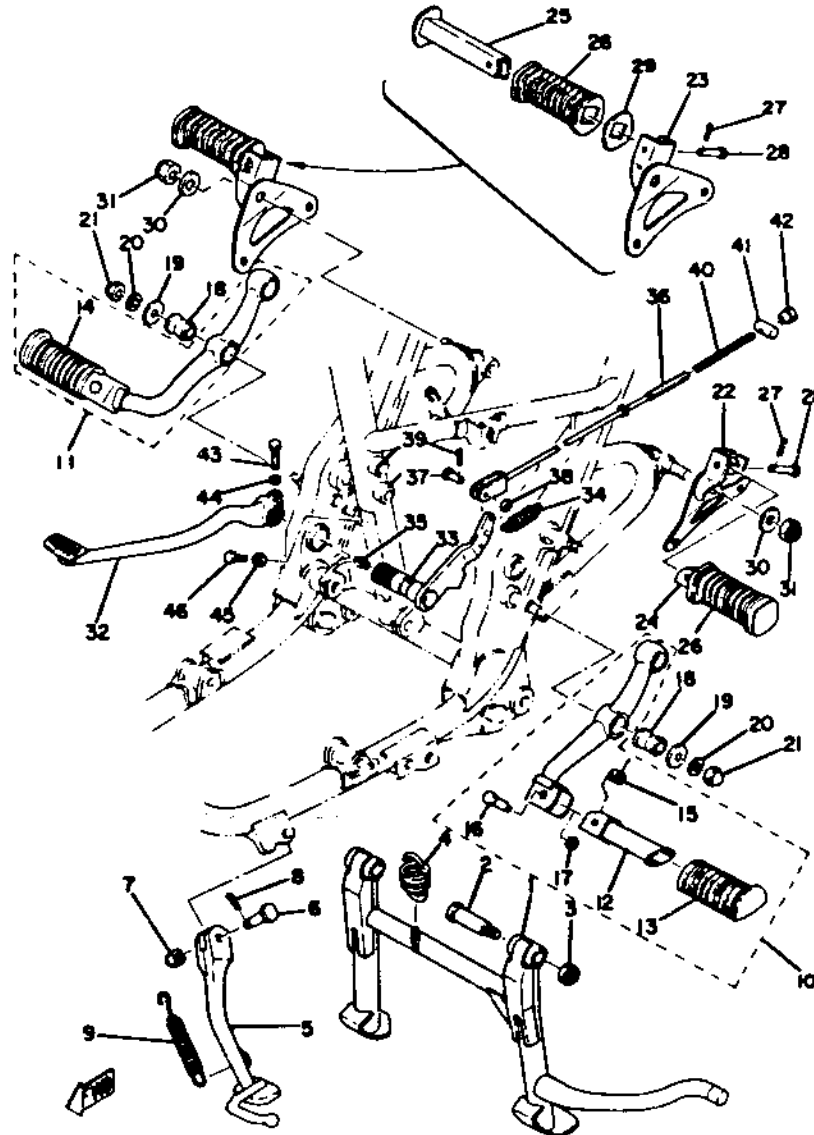

Ref. No.	Part Number	Description	A	B	C
24	447-27431-00-00	FOOTREST, rear left			1
25	447-27441-00-00	FOOTREST, rear right			1
26	447-27433-00-00	COVER, rear footrest			2
27	91401-16015-00	PIN, cotter			2
28	91701-06035-00	PIN, clevis (91501-06035)			2
29	90209-18070-00	WASHER			2
30	90201-13502-00	WASHER, plate			2
31	90185-12046-00	NUT, self-locking			2
32	533-27211-01-93	PEDAL, brake			2
33	533-27212-00-00	SHAFT, brake pedal			1
34	90506-23046-00	SPRING			1
35	93700-06004-00	NIPPLE, grease			1

## XS650C

36	447-27231-02-00	ROD, brake			1
37	90249-12008-00	PIN			1
38	90201-08083-00	WASHER, plate			1
39	91401-20015-00	PIN, cotter			1
40	90501-10245-00	SPRING			1
41	90249-1200E-00	Pin			1
42	90179-06176-00	NUT			1
43	97321-06025-00	BOLT			1
44	92903-06100-00	WASHER, spring			1
45	90170-06184-00	NUT, hexagon			1
46	90153-06008-00	SCREW			1