


Ref. No.	Part Number	Description	DEF
1	1T3-82590-60-00	WIRE HARNESS ASS'Y	1
	1T3-82590-61-00	WIRE HARNESS ASS'Y	1
	2F0-82590-51-00	WIRE HARNESS ASS'Y	1
	2F0-82590-52-00	WIRE HARNESS ASS'Y	1
2	447-81950-10-00	RELAY ASS'Y	1
	447-81950-50-00	RELAY ASS'Y	1
	2F0-81950-50-00	RELAY ASS'Y	1
3	92501-06025-00	SCREW, pan head	2 2 2
4	92903-06100-00	WASHER, spring	2 2 2
5	90201-06052-00	WASHER, plate (136-22316-00)	2 2 2
6	366-83371-52-00	HORN	1 1 1
7	97301-08025-00	BOLT, hexagon	2 2 2
8	92903-08100-00	WASHER, spring	2 2 2
9	90201-08107-00	WASHER, plate (137-24186-00)	2 2 2
10	254-82310-60-00	IGNITION COIL ASS'Y	2 2 2
11	92903-06100-00	WASHER, spring	4 4 4
12	95301-06600-00	NUT, hexagon	4 4 4
13	447-82341-00-00	CORD, high tension	2 2 2
14	256-82370-00-00	PLUG CAP ASS'Y	2 2
	512-82370-10-00	PLUG CAP ASS'Y (Heavy Duty)	2
15	447-82110-79-00	BATTERY ASS'Y (YB14L-A2)	1 1 1
	(447-82110-81)		

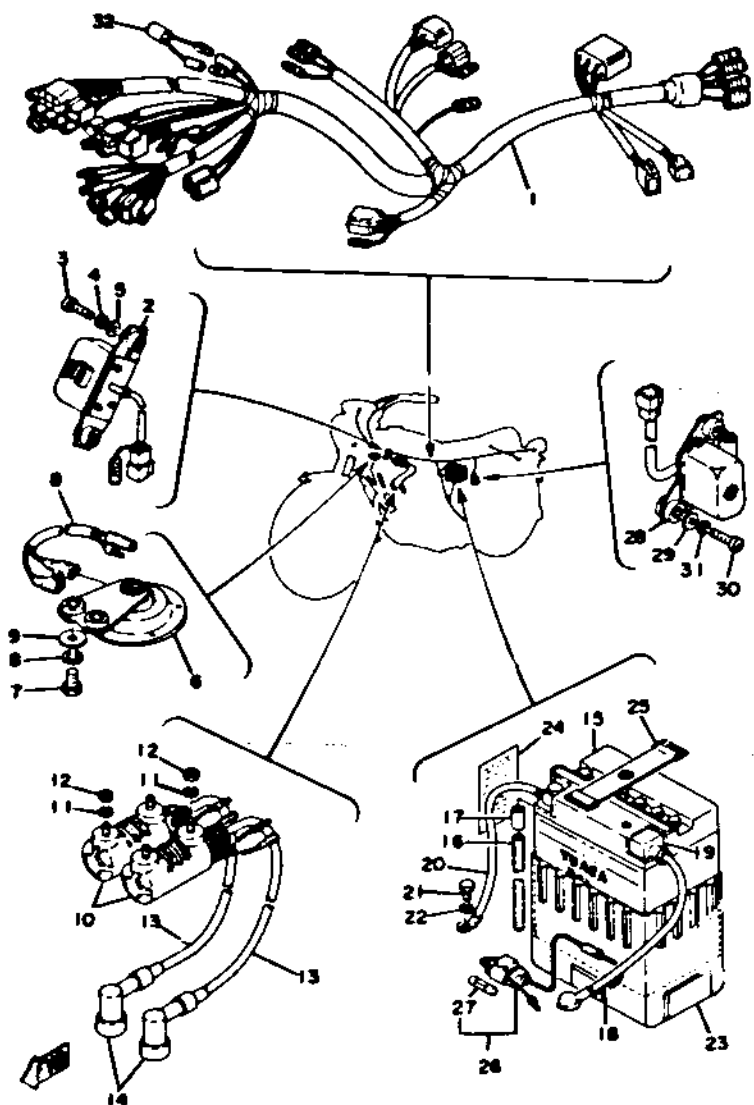

Ref. No.	Part Number	Description	DEF
18	90445-08048-00	HOSE (341-82112-00)	1 1 1
17	90386-07043-00	COLLAR (7.6-9.5-20).....	1 1 1
18	447-82115-01-00	WIRE, plus lead.....	1 1 1
19	447-82119-00-00	COVER, lead wire	1 1 1
20	447-82116-00-00	WIRE, minus lead	1 1 1
	97301-06012-00	WIRE, minus lead	1
21	97301-06012-00	BOLT, hexagon.....	1 1 1
22	92903-06100-00	WASHER, spring.....	1 1 1
23	447-82122-00-00	SEAT, battery.....	1 1 1
24	LIT-82141-09-00	LABEL, battery (118-82141-09)	1 1 1
25	120-82131-00-00	BAND, battery	1 1 1
26	1E2-82150-00-00	FUSE HOLDER ASS'Y	1 1 1
27	1A0-82161-00-00	. FUSE (12V-20A) (148-82151-00)	2 2 2
28	447-81910-10-00	VOLTAGE REGULATOR ASS'Y	1 1 1
29	90201-06052-00	WASHER, plate (136-22316-00)	2 2 2
30	92501-06025-00	SCREW, pan head.....	2 2 2
31	92903-06100-00	SCREW, pan head.....	2 2 2
32	341-81980-30-00	DIODE ASS'Y (341-81980-01)...	1 1 1