



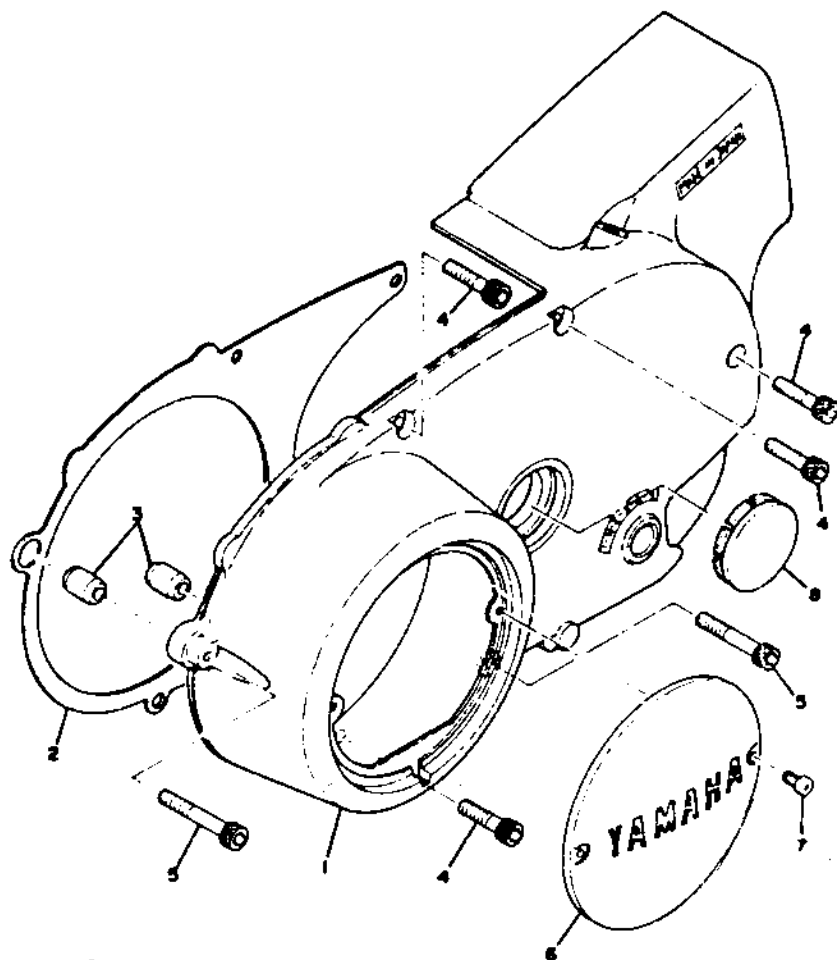

Ref. No.	Part Number	Description	DEF		
1	584-15411-00-00	COVER, crankcase left	1	1	1
2	306-15461-00-00	GASKET, crankcase cover left...	1	1	1
3	91830-22016-00	PIN, dowel (8.4-12-16)	2	2	2
4	91316-06025-00	BOLT, hexagon socket head.....	4	4	4
	2F0-00000-20-00	GASKET KIT.....	1	1	1
5	91316-06040-00	BOLT, hexagon socket head.....	2	2	2
6	256-15425-00-00	COVER, generator	1	1	1
7	98501-05010-00	SCREW, pan head	2	2	2
8	256-15417-01-00	COVER, adjust.....	1	1	1

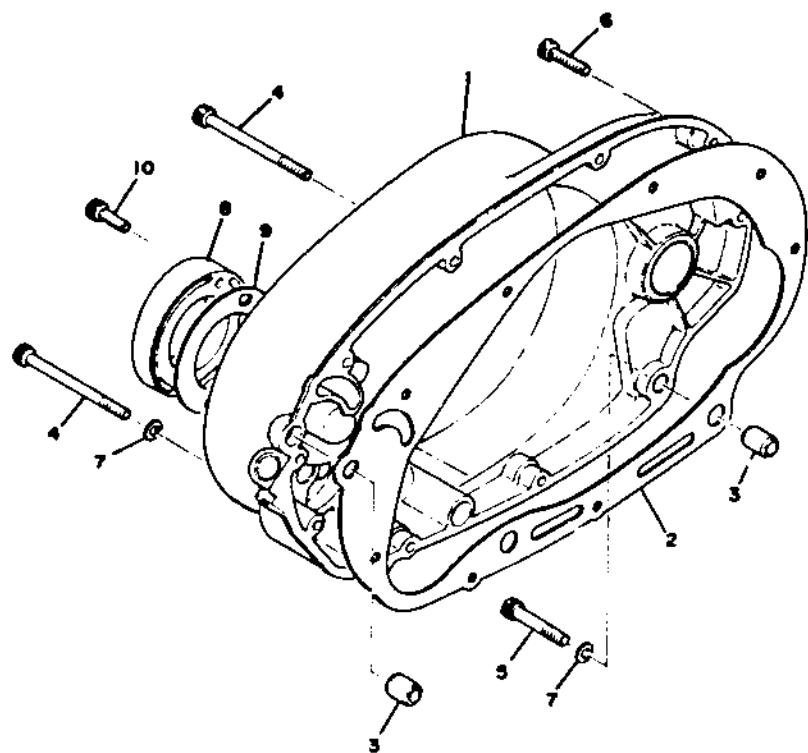

Ref. No.		Part Number	Description	DEF		
1	99999-01146-00	COVER, crankcase right (256-15421-04)	1 1 1			
	4E3-15421-00-00	. COVER, crankcase 2	1 1 1			
	2H7-15361-00-00	. GAUGE, level	1 1 1			
2	256-15451-00-00	GASKET, crankcase cover right	1 1 1			
3	91830-22016-00	PIN, dowel (8.4-12-16).....	2 2 2			
4	91316-06075-00	BOLT, hexagon socket head.....	4 4 4			
5	91316-06040-00	BOLT, hexagon socket head.....	1 1 1			
2F0-00000-20-00 GASKET KIT.....						
6	91316-06025-00	BOLT, hexagon socket head.....	5 5 5			
7	90430-06014-00	GASKET (256-11396-00)	4 4 4			
8	256-15416-02-00	COVER, oil cleaner	1 1 1			
9	256-15456-00-00	GASKET	1 1 1			
10	91316-06025-00	BOLT, hexagon socket head.....	2 2 2			