



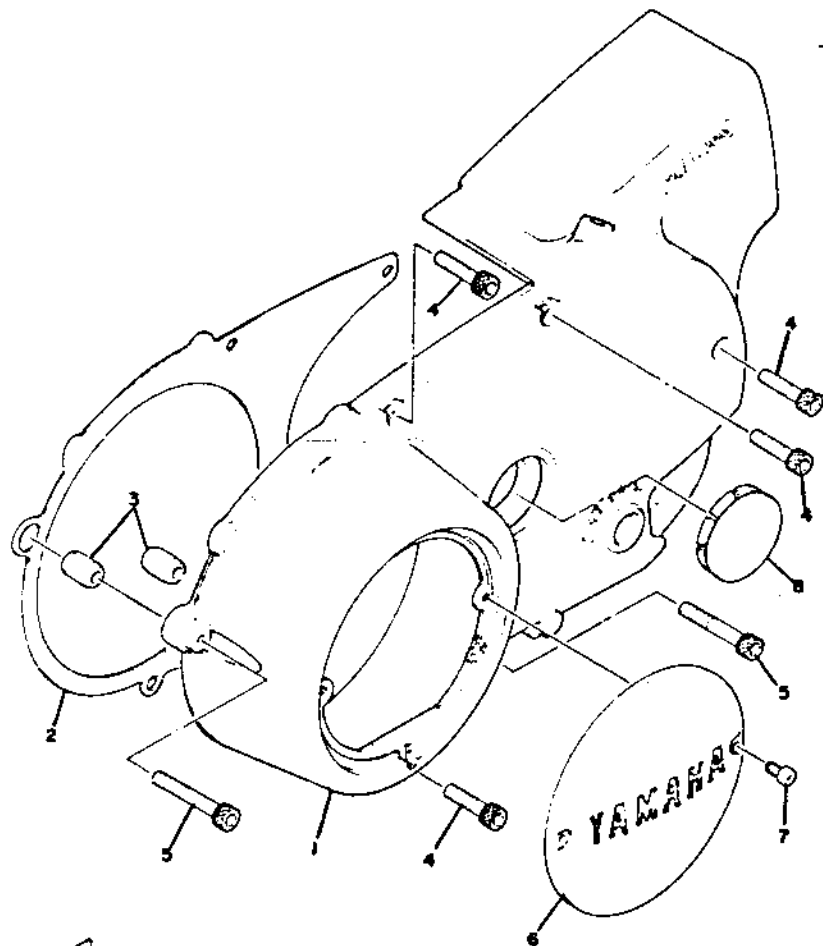

Ref. No.	Part Number	Description	Qty.
1	584-15411-00-00	COVER, crankcase left.....	1
2	306-15461-00-00	GASKET, crankcase cover left ...	1
3	91830-22016-00	PIN, dowel (8.4-12-16).....	2
4	91316-06025-00	BOLT, hexagon socket head	4
5	91316-06040-00	BOLT, hexagon socket head	2
6	256-15425-00-00	COVER, generator.....	1
7	98501-05010-00	SCREW, pan head (98503-05010)	2
8	256-15417-01-00	COVER, adjust.....	1

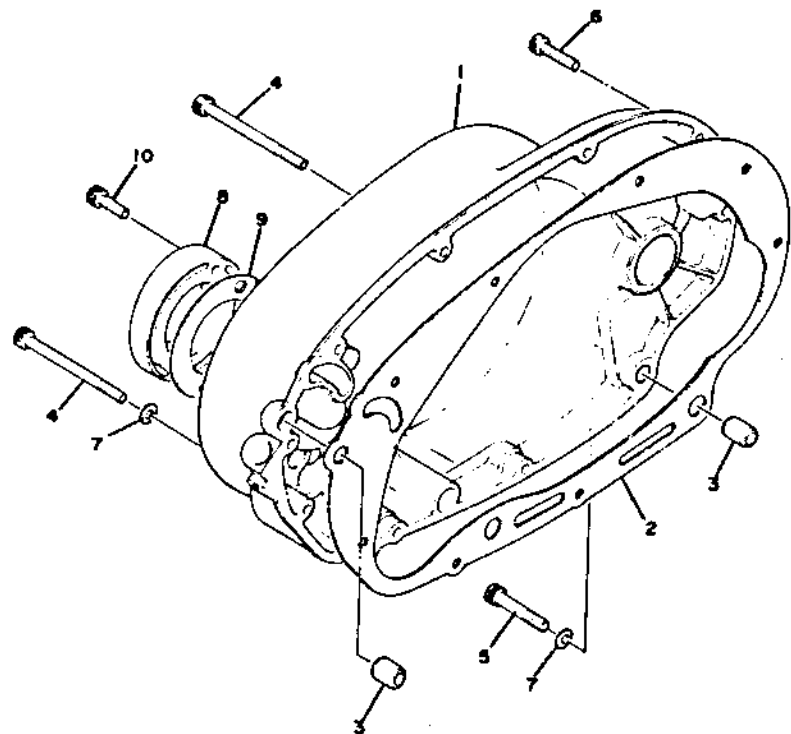

1	99999-01146-00	COVER, crankcase right (256-15421-04)	1
	4E3-15421-00-00	. COVER, crankcase 2	1
	2H7-15361-00-00	. GAUGE, level	1
2	256-15451-00-00	GASKET, crankcase cover right	1
3	91830-22016-00	PIN, dowel (8,4-12-16)	2
4	91316-06075-00	BOLT, hexagon socket head	4
5	91316-06040-00	BOLT, hexagon socket head	1
6	91316-06025-00	BOLT, hexagon socket head	5
7	90430-06014-00	GASKET (256-11396-00)	4
8	256-15416-02-00	COVER, oil cleaner	1
9	256-15456-00-00	GASKET	1
10	91316-06025-00	BOLT, hexagon socket head	2