



| No. | Number          | Description                   | Qty. |
|-----|-----------------|-------------------------------|------|
| * 1 | 306-Y1554-00-00 | WHEEL starter (306-15524-00)  | 1    |
| 2   | 90501-15409-00  | SPRING, compression           | 1    |
| 3   | 447-15516-00-00 | GEAR 4 (23T)                  | 1    |
| 4   | 90468-29062-00  | CLIP                          | 1    |
| 5   | 306-15515-00-00 | GEAR 3 (23T)                  | 1    |
| 6   | 90201-17257-00  | WASHER, plate                 | 1    |
| 7   | 306-15582-00-00 | CLIP                          | 2    |
| 8   | 306-15563-00-00 | HOLDER, clip                  | 1    |
| 9   | 93410-17008-00  | CIRCLIP                       | 1    |
| 10  | 306-15522-00-00 | SHAFT 2                       | 1    |
| 11  | 306-15513-00-00 | GEAR 1 (14T)                  | 1    |
| 12  | 306-15514-00-00 | GEAR 2 (24T)                  | 1    |
| 13  | 447-15531-00-00 | PLATE, stopper                | 1    |
| 14  | 92503-06020-00  | SCREW, pan head (92501-06020) | 1    |
| 15  | 306-15521-00-00 | SHAFT 1                       | 1    |
| 16  | 306-15512-00-00 | GEAR, idler 1 (36T)           | 1    |
| 17  | 306-15517-00-00 | GEAR, idler 2 (26T)           | 1    |
| 18  | 306-15571-00-00 | ABSORBER                      | 6    |
| 19  | 306-15532-00-00 | PLATE, idle gear              | 1    |
| 20  | 92503-06018-00  | SCREW, pan head (92501-06018) | 3    |
| 21  | 90387-12093-00  | COLLAR                        | 1    |
| 22  | 90206-12034-00  | WASHER, wave                  | 1    |
| 23  | 93102-34095-00  | OIL SEAL                      | 1    |
| 24  | 306-15431-00-00 | COVER, crankcase 3            | 1    |
| 25  | 306-15452-00-00 | GASKET, gear crank cover      | 1    |
| 26  | 93604-08071-00  | PIN, dowel                    | 2    |
| 27  | 97301-06025-00  | BOLT                          | 6    |

\*Indicates new part numbers activated from March, 1981.