



CRANKCASE COVER 1

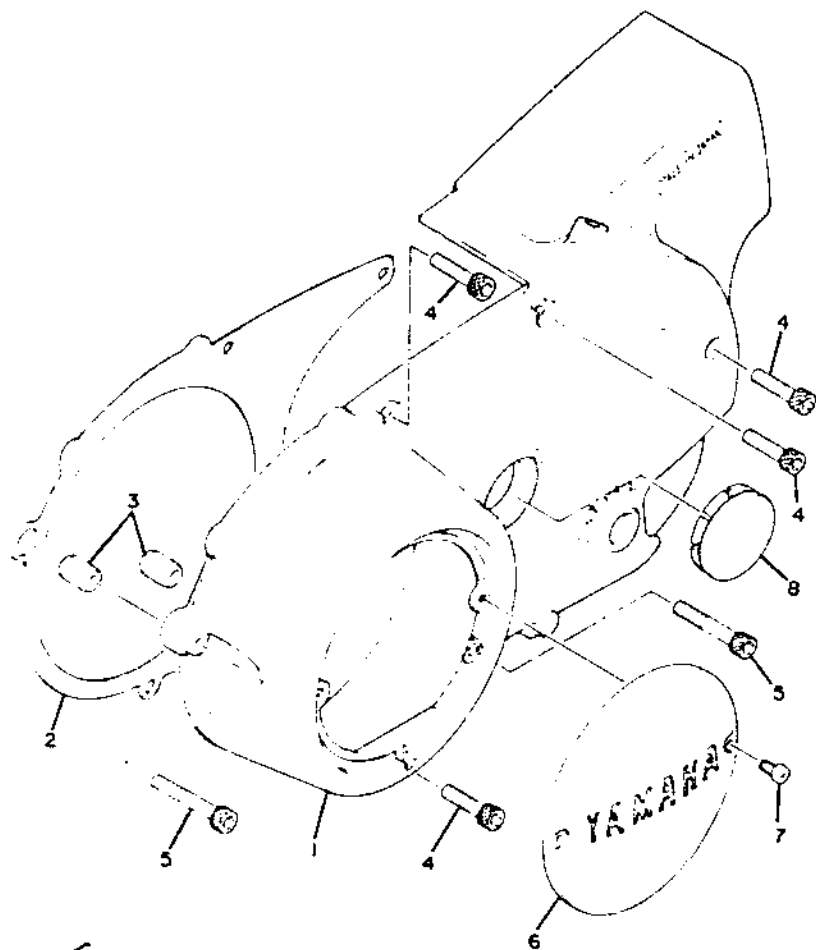

Ref. No.	Part Number	Description	Qty.
1	584-15411-00-00	COVER, crankcase 1.....	1
2	306-15461-00-00	GASKET, crankcase cover 2	1
3	91830-22016-00	PIN, dowel	2
4	91311-06025-00	BOLT	4
5	91311-06040-00	BOLT	2
6	256-15425-00-00	COVER, generator 2	1
7	98503-05010-00	SCREW, pan head	2
	98501-05010-00	SCREW, pan head (98503-05010)	2
8	256-15417-01-00	COVER, adjusting	1

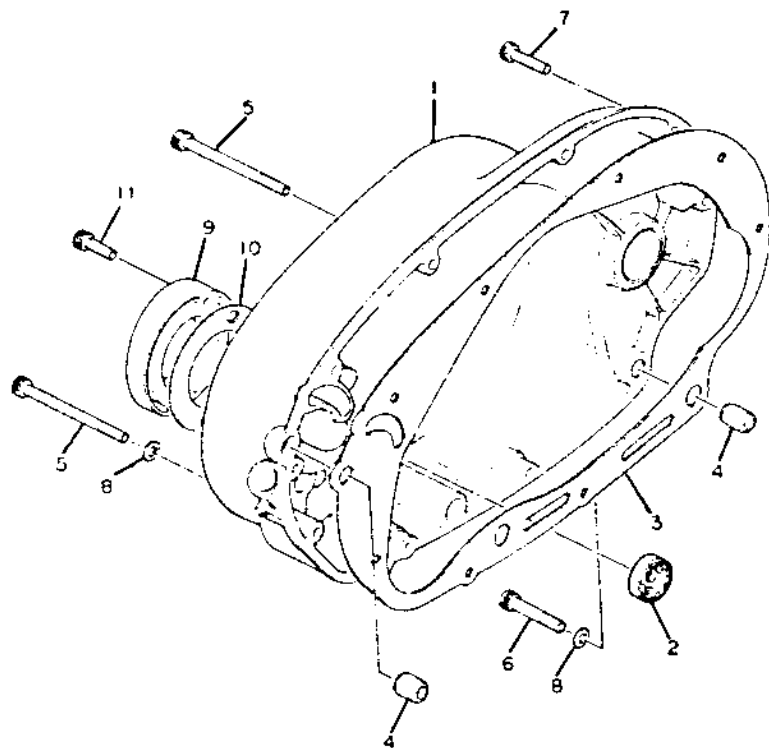

Ref. No.	Part Number	Description	Qty.
1	4E3-15421-00-00	COVER, crankcase 2.....	1
2	2H7-15361-00-00	GAUGE, level.....	1
3	256-15451-00-00	GASKET, crankcase cover	1
4	91830-22016-00	PIN, dowel	2
5	91311-06075-00	BOLT.....	4
6	91311-06040-00	BOLT.....	1
7	91311-06025-00	BOLT.....	5
8	90430-06014-00	GASKET	4
9	256-15416-02-00	COVER, oil pump.....	1
10	256-15456-00-00	GASKET	1
11	91311-06025-00	BOLT.....	2