


Ref. No.	Part Number	Description	Qty.
1	3H5-12111-01-00	VALVE, intake .....	4
2	3H5-12121-00-00	VALVE, exhaust.....	4
3	1J7-12116-00-00	SEAT, valve spring.....	8
4	90501-39414-00	SPRING, compression .....	8
5	90501-28415-00	SPRING, compression .....	8
6	2F3-12117-00-00	RETAINER, valve spring.....	8
7	1J7-12118-00-00	COTTER, valve.....	16
8	1J7-12119-01-00	SEAL, valve stem.....	8
9	1J7-12169-01-00	PAD, adjusting (2.00) .....	8
	1J7-12169-11-00	PAD, adjusting (2.05) .....	8
	1J7-12169-21-00	PAD, adjusting (2.10) .....	8
	1J7-12169-31-00	PAD, adjusting (2.15) .....	8
	1J7-12169-41-00	PAD, adjusting (2.20) .....	8
	1J7-12169-51-00	PAD, adjusting (2.25) .....	8
	1J7-12169-61-00	PAD, adjusting (2.30) .....	8
	1J7-12169-71-00	PAD, adjusting (2.35) .....	8
	1J7-12169-81-00	PAD, adjusting (2.40) .....	8
	1J7-12169-91-00	PAD, adjusting (2.45) .....	8
	1J7-12169-A1-00	PAD, adjusting (2.50) .....	8
	1J7-12169-E1-00	PAD, adjusting (2.55) .....	8

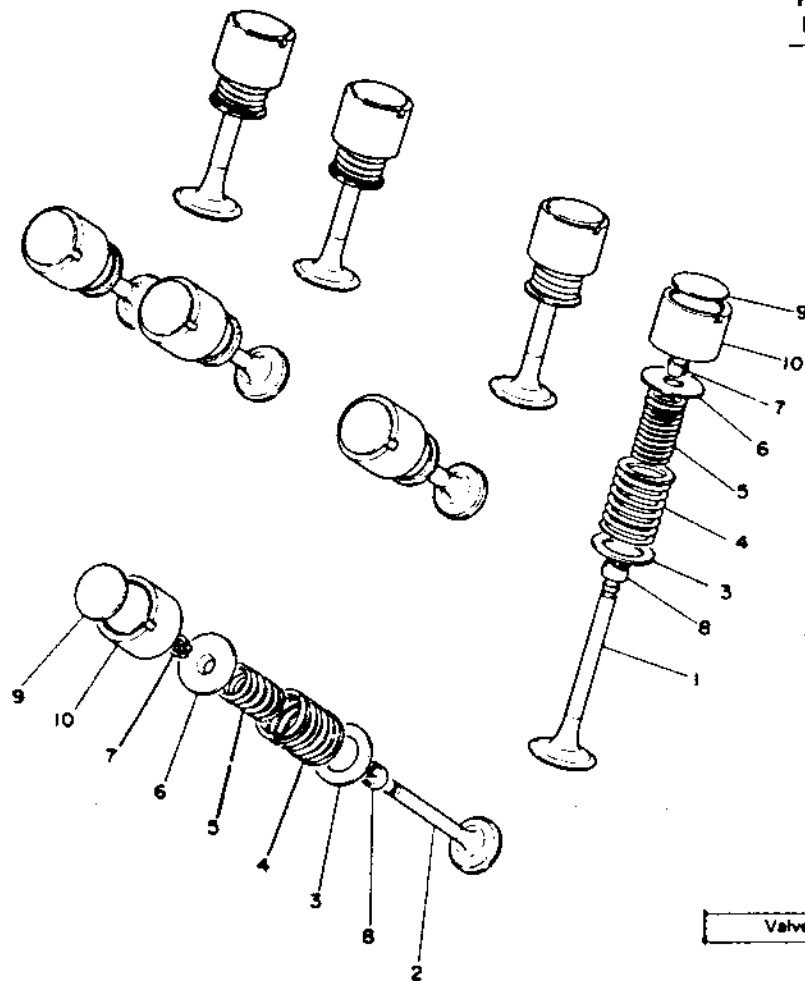

Ref. No.	Part Number	Description	Qty.
	1J7-12169-F1-00	PAD, adjusting (2.60) .....	8
	1J7-12169-G1-00	PAD, adjusting (2.65) .....	8
	1J7-12169-H1-00	PAD, adjusting (2.70) .....	8
	1J7-12169-J1-00	PAD, adjusting (2.75) .....	8
	1J7-12169-K1-00	PAD, adjusting (2.80) .....	8
	1J7-12169-L1-00	PAD, adjusting (2.85) .....	8
	1J7-12169-M1-00	PAD, adjusting (2.90) .....	8
	1J7-12169-N1-00	PAD, adjusting (2.95) .....	8
	1J7-12169-R1-00	PAD, adjusting (3.00) .....	8
	1J7-12169-T1-00	PAD, adjusting (3.05) .....	8
	1J7-12169-U1-00	PAD, adjusting (3.10) .....	8
	1J7-12169-V1-00	PAD, adjusting (3.15) .....	8
	1J7-12169-W1-00	PAD, adjusting (3.20) .....	8
10	4H7-12153-01-00	LIFTER, valve .....	8

Valve Clearance (Cold) Intake / Exhaust

0.11mm ~ 0.15mm / 0.21mm ~ 0.25mm

