


Ref. No.	Part Number	Description	XS 1	XS 1B	XS 2	TX 650
1	256-26111-00-00	HANDLE	1	1	1	1
2	235-26241-00-00	GRIP, left	1	1	1	1
3	235-83972-00-94	SWITCH, handle 4	1	1		
	306-83972-00-98	SWITCH, handle 4			1	1
0-1	214-82910-07-00	LEVER HOLDER ASS'Y, left (214-82910-C5)	1	1		
	306-82910-00-00	LEVER HOLDER ASS'Y, left			1	1
4	214-82911-01-00	HOLDER, lever left	1	1		
	461-82911-00-00	HOLDER, lever left (306-82911-00-98)			1	1
5	214-83912-01-00	LEVER, left	1	1	1	1
6	214-83915-00-00	SCREW, lever fitting	1			
	97303-06020-00	BOLT	1	1	1	1
7	214-83913-00-00	COLLAR, lever	1	1	1	1
8	95301-06900-00	NUT, slotted (92801-06500)	1			
	95303-06700-00	NUT	1	1	1	1
9	91401-12015-00	PIN, cotter	1			
10	97303-06020-00	BOLT	1	1	1	1
11	92903-06100-00	WASHER, spring	1	1	1	1
0-2	233-82920-33-00	LEVER HOLDER ASS'Y, right	1	1		
12	233-82921-31-00	HOLDER, lever right	1	1		
13	233-83922-31-00	LEVER, right	1	1		
14	90109-05197-00	SCREW, lever fitting (233-81915-01)	1	1		
15	214-83913-00-00	COLLAR, lever	1	1		
16	90201-06038-00	WASHER, plain	1	1		
17	95301-06900-00	NUT, slotted	1	1		
18	91401-12015-00	PIN, cotter	1	1		
19	97303-06020-00	BOLT	1	1		
11)	92903-06100-00	WASHER, spring	1	1		
21	235-26242-00-00	GRIP, right		1		
	306-26242-00-00	GRIP, right			1	1
22	256-26243-00-00	TUBE, guide	1	1	1	1
23	256-26281-00-00	CAP, grip upper		1		
24	177-26282-01-00	CAP, grip under	1			
	256-26282-00-00	CAP, grip under	1	1		
25	98501-05030-00	SCREW, pan head	1	1		

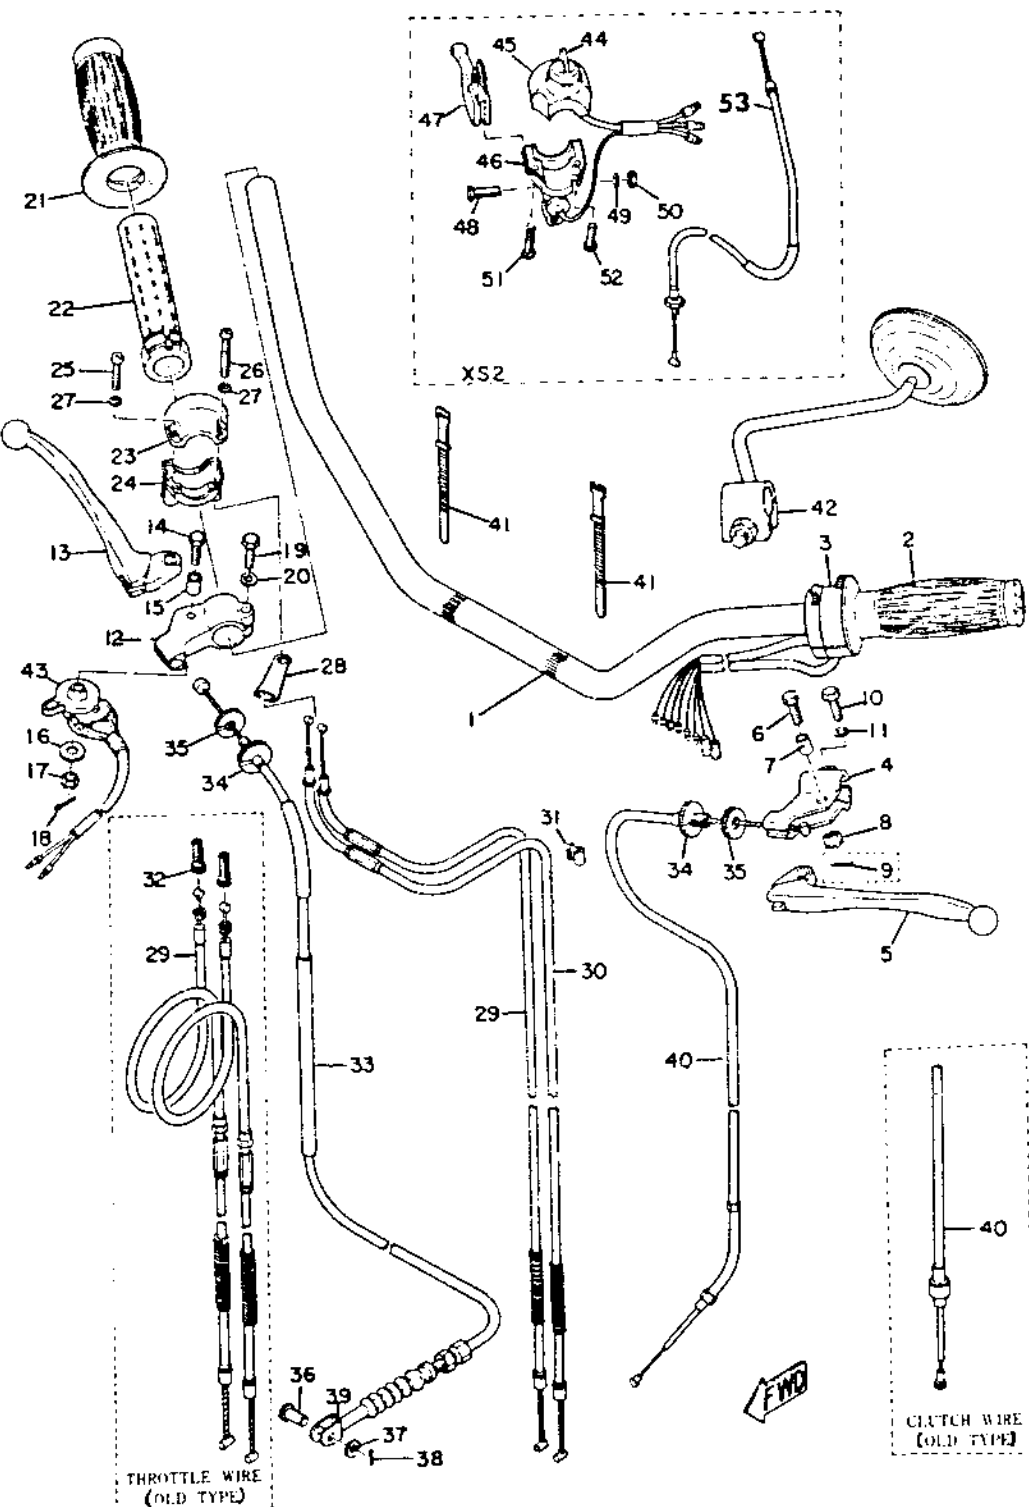

Ref. No.	Part Number	Description	XS	XS	XS	TX	Rel.
			1	12	2	650	Bul
26	98501-05046-00	SCREW, pan head (98501-05045).....	1	1			PN
27	92903-05100-00	WASHER, spring	2	2			
28	256-26393-00-00	HOLDER, wire guide	1	1			
	306-26393-00-00	HOLDER, wire guide			1	1	
29	256-26311-01-00	WIRE, throttle 1.....	1	1	1	1	
30	256-26312-00-00	WIRE, throttle 2.....	1	1	1	1	
31	90468-15009-00	CLIP, wire 1 (90468-15010)...	2	2	2	2	
32	90123-06007-00	BOLT, wire adjusting (177-26253-01).....	2				
33	256-26341-00-00	WIRE, brake front	1	1			
34	90123-08046-00	BOLT, adjusting (90123-08053).....	2	2	1	1	
35	90179-08148-00	NUT, wire adjusting (90179-08041).....	2	2	1	1	
36	90240-08012-00	PIN, link joint 2 (156-27229-00).....	1	1			
37	90201-08083-00	WASHER, pedal link (156-27226-00).....	1	1			
38	91401-20015-00	PIN, cotter	1	1			
39	156-26347-00-00	JOINT, wire	1	1			
40	447-26335-00-00	WIRE, clutch (256-26335-02)	1	1	1	1	
41	168-83936-01-00	BAND, switch cord	2	2	2	2	
42	256-26290-10-00	BACK MIRROR ASS'Y, left ...	1	1	1	1	Alt
	256-26290-00-00	BACK MIRROR ASS'Y, left ...	1	1	1	1	
43	232-83980-30-00	FRONT STOP SWITCH ASS'Y.	1	1			
	306-83980-30-00	FRONT STOP SWITCH ASS'Y			1	1	
44	306-83975-00-00	SWITCH, handle 2.....			1	1	Fr
45		. CASE, switch upper			1	1	N
46		. CASE, switch under			1	1	N
47	306-83981-00-00	. LEVER, decompression.....			1	1	
48	97303-06020-00	. BOLT			1	1	
49	92903-06100-00	. WASHER, spring.....			1	1	
50	95301-06700-00	. NUT			1	1	
51	98501-05035-00	. SCREW, pan head.....			1	1	
52	98503-05020-00	. SCREW, pan head.....			1	1	
53	306-26371-00-00	WIRE, decompression.....			1	1	