


Ref. No.	Part Number	Description	Qty.
1	2H8-W2533-00-00	CAST WHEEL, rear (2.50-17)	1
2	2H7-25317-00-00	SPACER, bearing	1
3	93313-62010-00	BEARING, cylindrical	1
4	93306-30404-00	BEARING (B6304Z)	1
5	93102-25045-00	OIL SEAL	1
6	93104-27026-00	OIL SEAL	1
7	90387-20541-00	COLLAR	1
8	93210-41358-00	O-RING	1
9	93210-58144-00	O-RING	1
10	2H7-25366-00-00	CLUTCH, hub	1
11	90109-10491-00	BOLT	6
12	95380-10600-00	NUT	6
13	92903-10100-00	WASPER, spring (92901-10100)	6
14	90201-10124-00	WASHER, plate	6
15	93420-52014-00	CIRCLIP	1
16	1J7-25319-01-00	SEAL, hub dust	1
17	2H7-25315-00-00	FLANGE, spacer	1
18	94145-17395-00	TIRE (4.50-17)	1
19	93900-00001-00	VALVE, rim	1
20	2H7-25327-00-00	COVER, plate	1

Tire Size (Nominal Pressure)	F350H18 (2.1 kg/cm ²) @ psi R450H17 (2.1 kg/cm ²)
Rear Axle Nut	18 x 1.5: 15.0 m·kg
Rear Axle Pinch Bolt	8 x 1.25: 0.6 m·kg

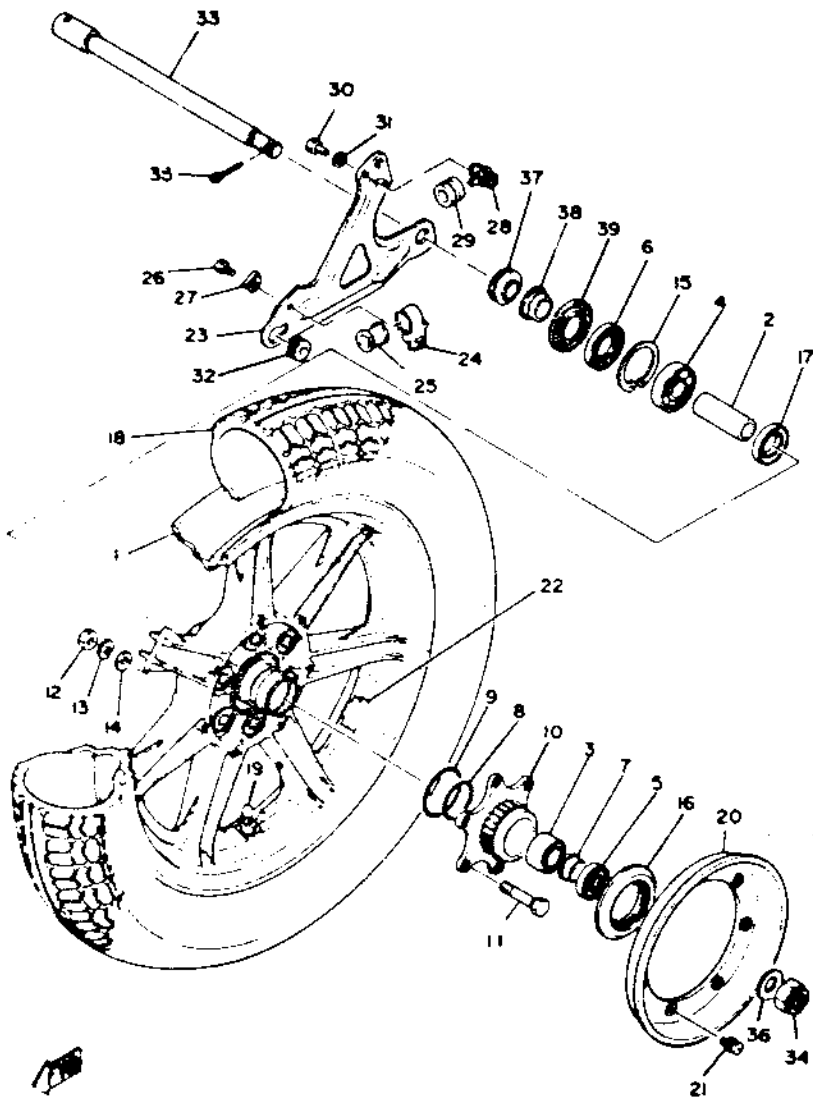

Ref. No.	Part Number	Description	Qty.
21	90159-05018-00	SCREW, with washer	4
22	1A1-25399-00-00	BALANCER, wheel (10G)	1
	1A1-25398-01-00	BALANCER, wheel (20G)	1
	2M0-25399-00-00	BALANCER, wheel (30G)	1
23	2H7-25371-00-00	PLATE, torque stopper	1
24	2H7-25886-00-00	HOLDER, brake shoe	1
25	306-25881-00-00	PROTECTOR, brake hose	1
26	97306-06014-00	BOLT	1
27	90215-06128-00	WASHER, lock	1
28	2H7-25887-00-00	HOLDER, brake hose	1
29	341-25881-00-00	PROTECTOR, brake hose	1
30	97306-06014-00	BOLT	1
31	92906-06100-00	WASHER, spring	1
32	1J7-25374-00-00	SPACER, torque stopper	1
33	2H7-25381-00-00	AXLE, wheel	1
34	90171-18008-00	NUT, castle	1
35	91401-40035-00	PIN, cotter	1
36	90201-18620-00	WASHER, plate	1
37	90387-20637-00	COLLAR	1
38	1J7-25377-00-00	COLLAR, wheel	1
39	1J7-25367-00-00	COVER, hub dust	1